




Wiring terminals, trimmers, coding

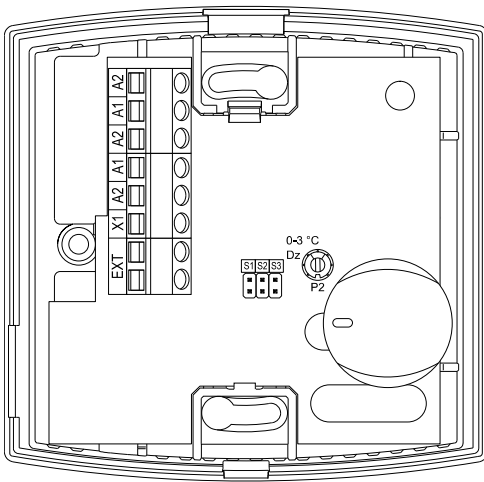

Stages

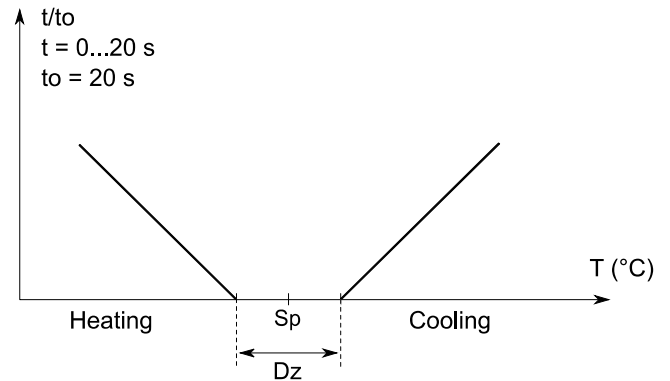

Wiring

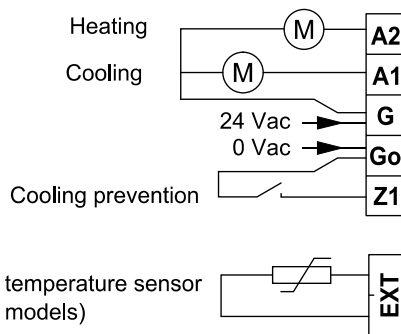

Coding by using jumpers

S1	Valve jam prevention		Valve jam prevention on
			Valve jam prevention off
S2	Proportional band (Xp)		2 °C
			1 °C
S3	Centre of user set point area	The user set point area centre (factory setting 21 °C) can be changed by turning the potentiometer to the desired position and then removing and replacing the jumper.	

Things to be taken into account during commissioning

1. While changing trimmer positions or other settings, the setting values are shown on the HLS 21-N display (a display can be connected also temporarily for the commissioning procedure)
2. If the cooling is prevented but the cooling is still needed, the green indicator light flashes every 30 seconds

NOTE: Block the air flow coming through the cable protection tubes.